

---

# PETSTER PUPPY

## OPERATING INSTRUCTIONS

### FEEDING YOUR PETSTER PUPPY

The proper diet is four "AA" batteries and two 9 volt batteries.

1. Make sure Puppy's on/off switch (on Puppy's underside) is in the "off" position.
2. Put the "AA" batteries and one of the 9V batteries in the battery compartment in Puppy's underside. Make sure the (+) and (-) signs are in the proper location.
3. Put the other 9V battery in the compartment in the Hand Control Unit.

### TAKING YOUR PETSTER PUPPY FOR A WALK

To get Puppy on the move, turn the on/off switch on Petster's underside to the "on" position and set the Puppy on the floor. **BE CAREFUL TO KEEP FINGERS AWAY FROM PETSTER'S SPINNING WHEELS.**

Petster Puppy will roll merrily along until you press the button on the Hand Control Unit. Pressing the button causes Puppy to back up while turning to the right. Release the button and Puppy continues going straight again. Holding the antenna straight up in the air produces the best results.

### HEALTH CARE

When you and Petster Puppy decide to rest for a while, don't forget to turn the on/off switch to the "off" position. Otherwise, Puppy will not get as much rest as you do (the batteries will continue to run down).

If you're not going to play with Puppy for a long time, take the batteries out in case they accidentally leak.

Don't run Puppy in sand or water. Puppy hates mud!

When Puppy gets slow, install fresh "AA" batteries. When Puppy won't back up unless the Hand Control Unit is held close by, put a fresh 9 volt battery in the Hand Control Unit.

Give Puppy a rest at least every 20 minutes to allow the batteries to refresh.

---

# PETSTER PUPPY

## OPERATING INSTRUCTIONS

### FEEDING YOUR PETSTER PUPPY

The proper diet is four "AA" batteries and two 9 volt batteries.

1. Make sure Puppy's on/off switch (on Puppy's underside) is in the "off" position.
2. Put the "AA" batteries and one of the 9V batteries in the battery compartment in Puppy's underside. Make sure the (+) and (-) signs are in the proper location.
3. Put the other 9V battery in the compartment in the Hand Control Unit.

### TAKING YOUR PETSTER PUPPY FOR A WALK

To get Puppy on the move, turn the on/off switch on Petster's underside to the "on" position and set the Puppy on the floor. **BE CAREFUL TO KEEP FINGERS AWAY FROM PETSTER'S SPINNING WHEELS.**

Petster Puppy will roll merrily along until you press the button on the Hand Control Unit. Pressing the button causes Puppy to back up while turning to the right. Release the button and Puppy continues going straight again. Holding the antenna straight up in the air produces the best results.

### HEALTH CARE

When you and Petster Puppy decide to rest for a while, don't forget to turn the on/off switch to the "off" position. Otherwise, Puppy will not get as much rest as you do (the batteries will continue to run down).

If you're not going to play with Puppy for a long time, take the batteries out in case they accidentally leak.

Don't run Puppy in sand or water. Puppy hates mud!

When Puppy gets slow, install fresh "AA" batteries. When Puppy won't back up unless the Hand Control Unit is held close by, put a fresh 9 volt battery in the Hand Control Unit.

Give Puppy a rest at least every 20 minutes to allow the batteries to refresh.